




National Metal Industries

2 Neil Court
Oceanside, NY 11572

T: 516-594-0364

F: 516-594-0377

E: sales@nmifence.com

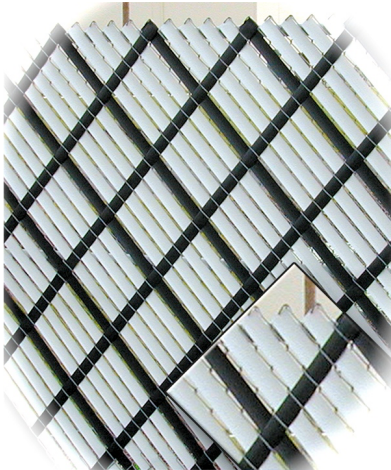

ALUMINUM SLATS INSTALLATION INSTRUCTIONS

ONE IN FIVE SLATS ARE INSTALLED DIAGONALLY AND CUT THE SAME LENGTH.

(FOR EXAMPLE: A 6' HIGH FENCE WILL NEED 92 1/2" LONG SLATS).

*THE MOST POPULAR DESIGN IS ONE IN FIVE,
(FOUR SLATS OF MAIN COLOR, AND THE 5TH SLAT IN CONTRAST COLOR).

INSTALLATION:

1. COUNT FIVE DIAMONDS AND INSERT THE CONTRAST COLOR WITH THE CURVE FACING YOU INSIDE OF THE CHAIN LINK (**DO NOT WEAVE IN AND OUT**). FOLD THE U TABS, ONE TOWARDS YOU, AND ONE AWAY FROM YOU. CONTINUE PUTTING THE SAME COLOR TO EVERY FIFTH CHAIN LINK DIAMOND. (THIS WILL BE THE LOCK-IN-PLACE SLAT).
2. LOOK AT THE FENCE CAREFULLY, YOU WILL SEE THAT THE SLAT WILL LAY DIAGONALLY INSIDE THE CURVE OF THE CHAIN LINK FENCE.
3. START WITH THE LEFT HAND CORNER. THE SLAT WILL BE CURVED.
4. LAY THE SLAT ON THE CHAIN LINK WITH THE CONCAVE CURVE FACING YOU. WITH THE U TAB FACING (**UP**), CUT TO SIZE WHILE SAVING THE LEFTOVER PIECES
5. FOLD THE U TAB, ONE TO THE LEFT OVER THE CHAIN LINK FENCE, AND THEN AGAIN TO THE RIGHT.
6. LAY 4 PIECES IN THE SAME PATTERN, AGAIN ALWAYS SAVE THE LEFT OVER PIECES.
7. NOW, LAY DOWN ONE OF THE CONTRASTING COLORS, SO THAT YOU WILL HAVE FOUR OF THE MAIN COLOR AND THE FIFTH OF THE CONTRAST COLOR. (YOU SHOULD NOW SEE A DIAMOND PATTERN TAKING SHAPE)
8. INSERT FOUR MORE PIECES OF THE MAIN COLOR, THEN ONE MORE OF THE CONTRAST COLOR.
9. CONTINUE REPEATING THE SAME PATTERN, UNTILL YOU REACH THE OTHER END. USE THE LEFTOVER PIECES ON THE BOTTOM CORNER, FROM THE FRONT TOP TO THE LEFT.

WWW.NMIFENCE.COM